




## 2-point Latch Adjustment

Adjusting the door hardware may be necessary if:

- Door opening or closing is difficult.
- There are signs of water intrusion.
- Door is making contact with body.


1. Open the door slightly and evaluate the latch (1) and striker (2). The latch slot (3) should line up with the striker.
2. If striker does not directly line up with slot, loosen the two top bolts (4) on the latching mechanism with a 7/16" wrench or socket.
3. Move the bracket left or right to achieve ideal location.
4. Re-tighten both bolts to secure in place.

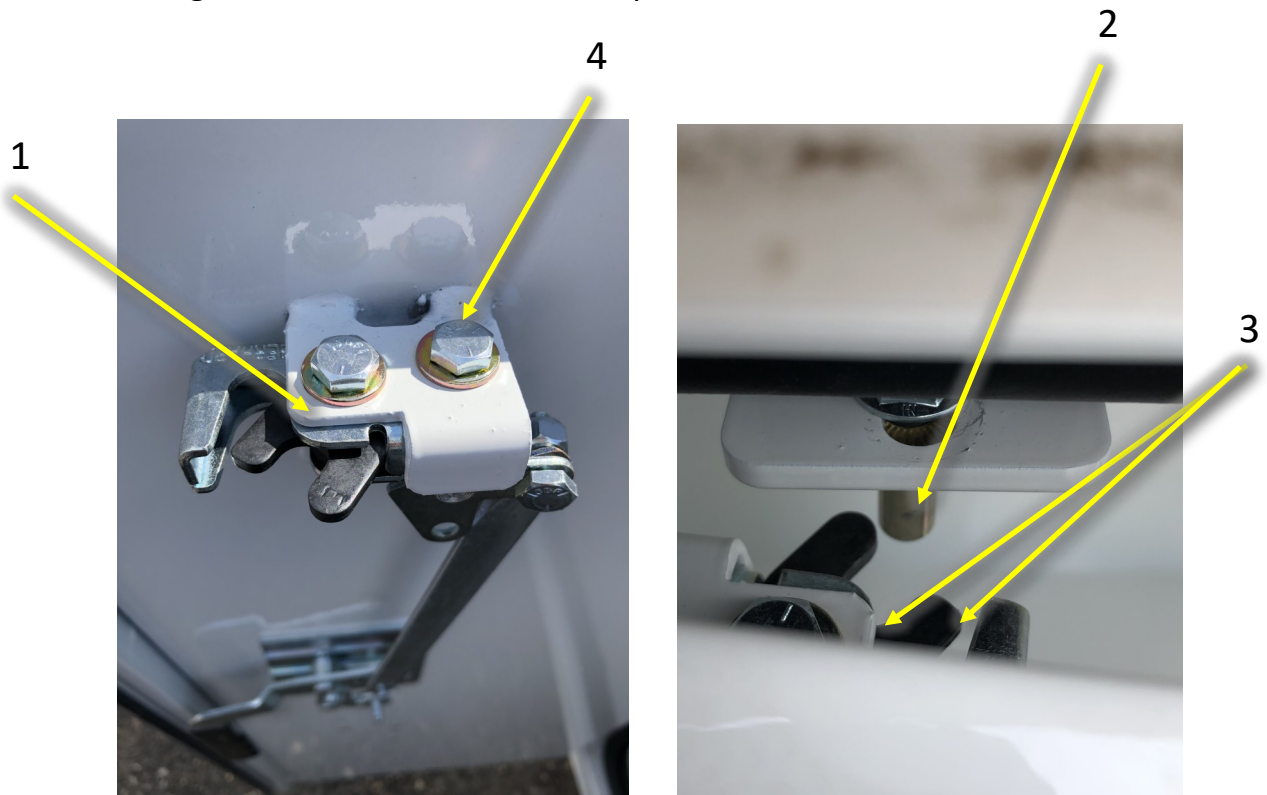



## 2-point Latch Adjustment

5. With door fully closed, evaluate exterior door gap (1). The gap between the body and door should be such that the seal is compressed but not to the point where the door contacts the side of the body, approximately  $1/8'' \pm 1/16''$ .
6. If door is not within acceptable parameters, loosen the single striker bolt (2) with a  $1/2''$  wrench or socket and 6mm allen wrench.
7. Adjust striker location out for a larger gap or in for a tighter gap.
8. Re-tighten bolt and evaluate door gap after closing. Repeat steps 5-7 if necessary.

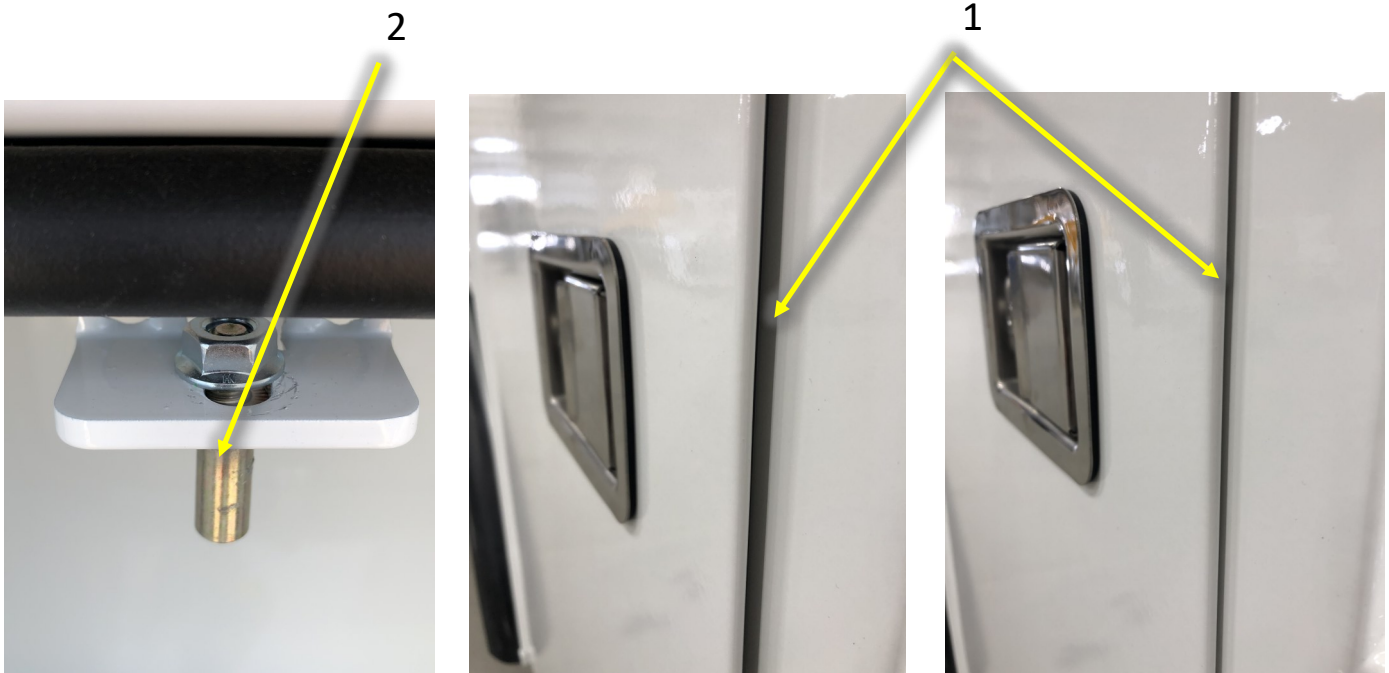

If problem still occurs after the door has been adjusted, please contact us by phone or email.

[warranty@dakotabodies.com](mailto:warranty@dakotabodies.com)

605-882-1400 ext. 228