




Compression T-Handle Latches

Adjusting the door hardware may be necessary if:

- Door opening or closing is difficult.
- There are signs of water intrusion.
- Door is making contact with body.

1. With door fully closed, evaluate exterior door gap (1). The gap between the body and door should be such that the seal is compressed but not to the point where the door contacts the side of the body, approximately $1/8'' \pm 1/16''$.
2. If door is not within acceptable parameters, loosen the latch roller with a $5/32''$ allen wrench.
3. Adjust roller closer to door for a tighter gap and further away from door for a larger gap.
4. Re-tighten bolt and evaluate door gap after closing. Repeat steps 1-4 if necessary.

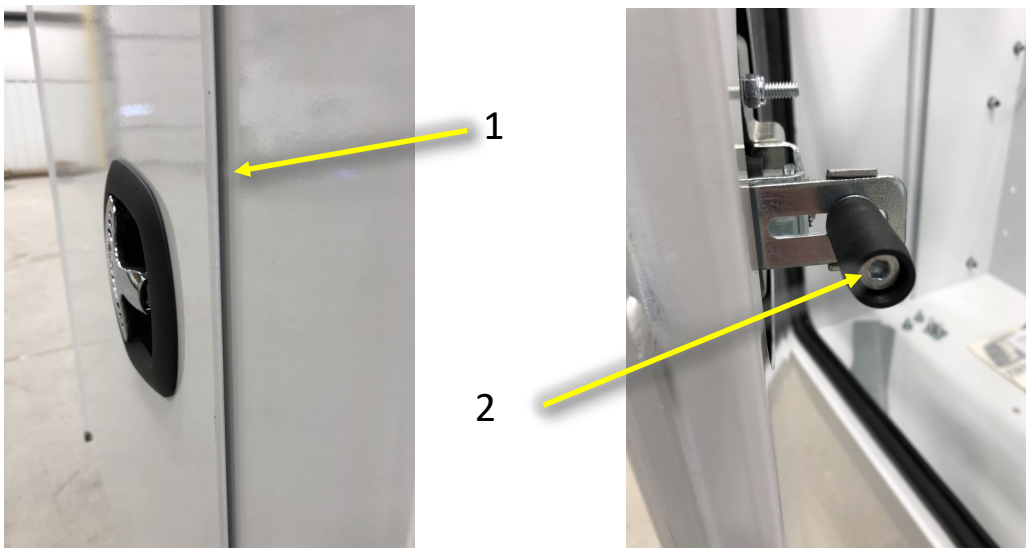

If problem still occurs after the door has been adjusted, please contact us by phone or email.

warranty@dakotabodies.com

605-882-1400 ext. 228